

KRAIBURG VITA

Prerequisites:




Concrete area:

- Min. 10 cm thick
- No holes
- No ridges

Mats:


Even temperature:
min. 5°C to max. 30°C
(store according to initial temperature)

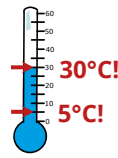


For animal well-being, a certain amount of bedding is necessary to absorb moisture (e.g. soft milled straw or mineral material)!

You will need:


Measuring:

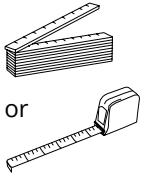


Marking:

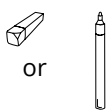

Cutting:

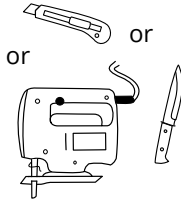

Drilling and installing:

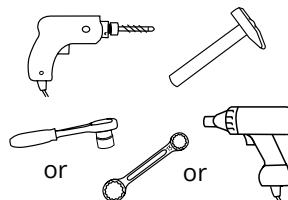

KRAIBURG fixings:

Framing plugs \varnothing 10 x 100 mm with

- Hexagon screws (AF 13) - A2


- Washers \varnothing 30 mm - A2

Spax screws \varnothing 5 x 60 mm


(Fixings are part of the delivery)



1 Install VITA Border (frame bars)

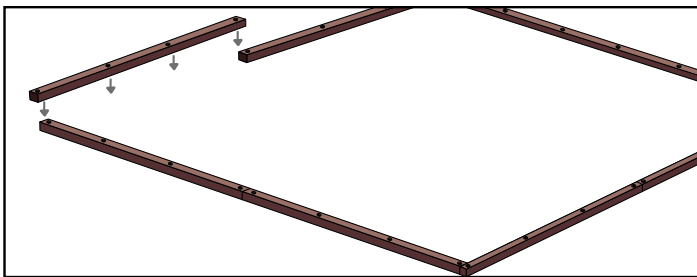

Adapt frame bars to the area being covered

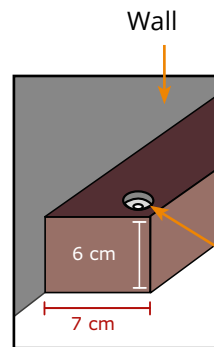


IMPORTANT: If the frame bar is cut off, drill and countersink an additional hole!


Drill hole into the inner edge

2 Plug and fix VITA Border (frame bars) through the pre-drilled holes


> Framing plugs \varnothing 10 x 100 mm

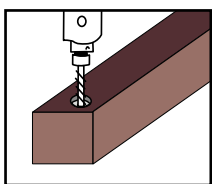

Drill through the pilot hole

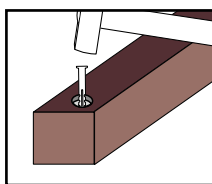

Knock the plastic plugs in flush

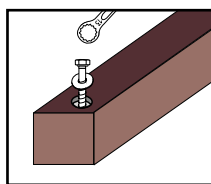


Tighten screws and washers

IMPORTANT: Tighten screws until they are seated evenly and firmly. Do not overtighten!

3 Insert VITA Cup (lower mats) into the installed frame

Open cups on upper side

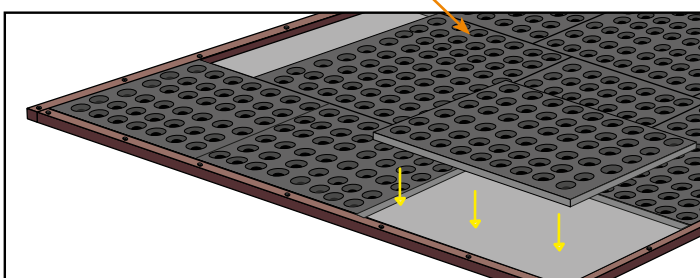


Install the lower mats jointless throughout the whole area; if necessary, cut the mats to fit

Lower mats can be installed crosswise and/or lengthwise.





4 Install KRAI-PUR (foam) fully across the lower mats

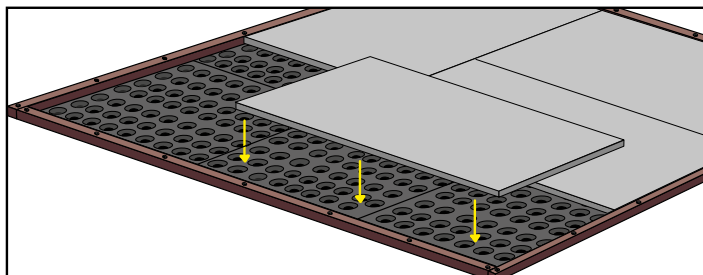


Foam parts can be installed crosswise and/or lengthwise.

Lay the foam mats next to each other jointless; if necessary, cut individual pieces to fit

5 Roll out and position VITA LongLine (top covering)

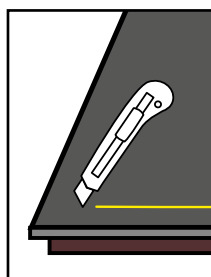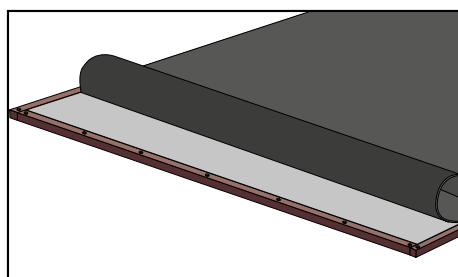

Cut off overlaying mat parts at the edges

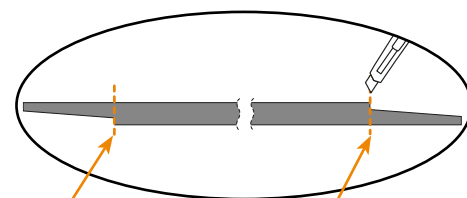


Cut off optionally

Cut off generally


6 Fix VITA LongLine (top covering) with VITA Top (covering strip)

A Lay covering strips on the top covering along the walls

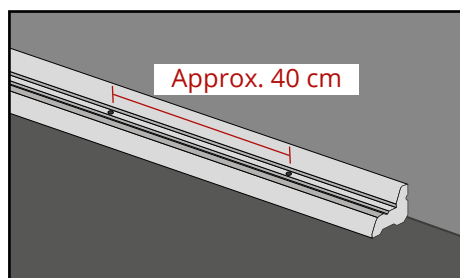

- High end at edge
- Flush to wall

B Fix every 40 cm in the position groove
> Spax screws $\varnothing 5 \times 60 \text{ mm}$

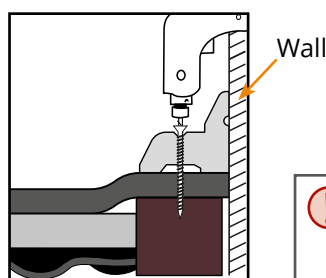

Tighten screws until they are seated evenly and firmly.
Do not overtighten!